



# Operation Manual


## eYc SD05 Integrated Signal Indicator



eYc SD05




### 1. 2-Wire(4 ... 20 mA)

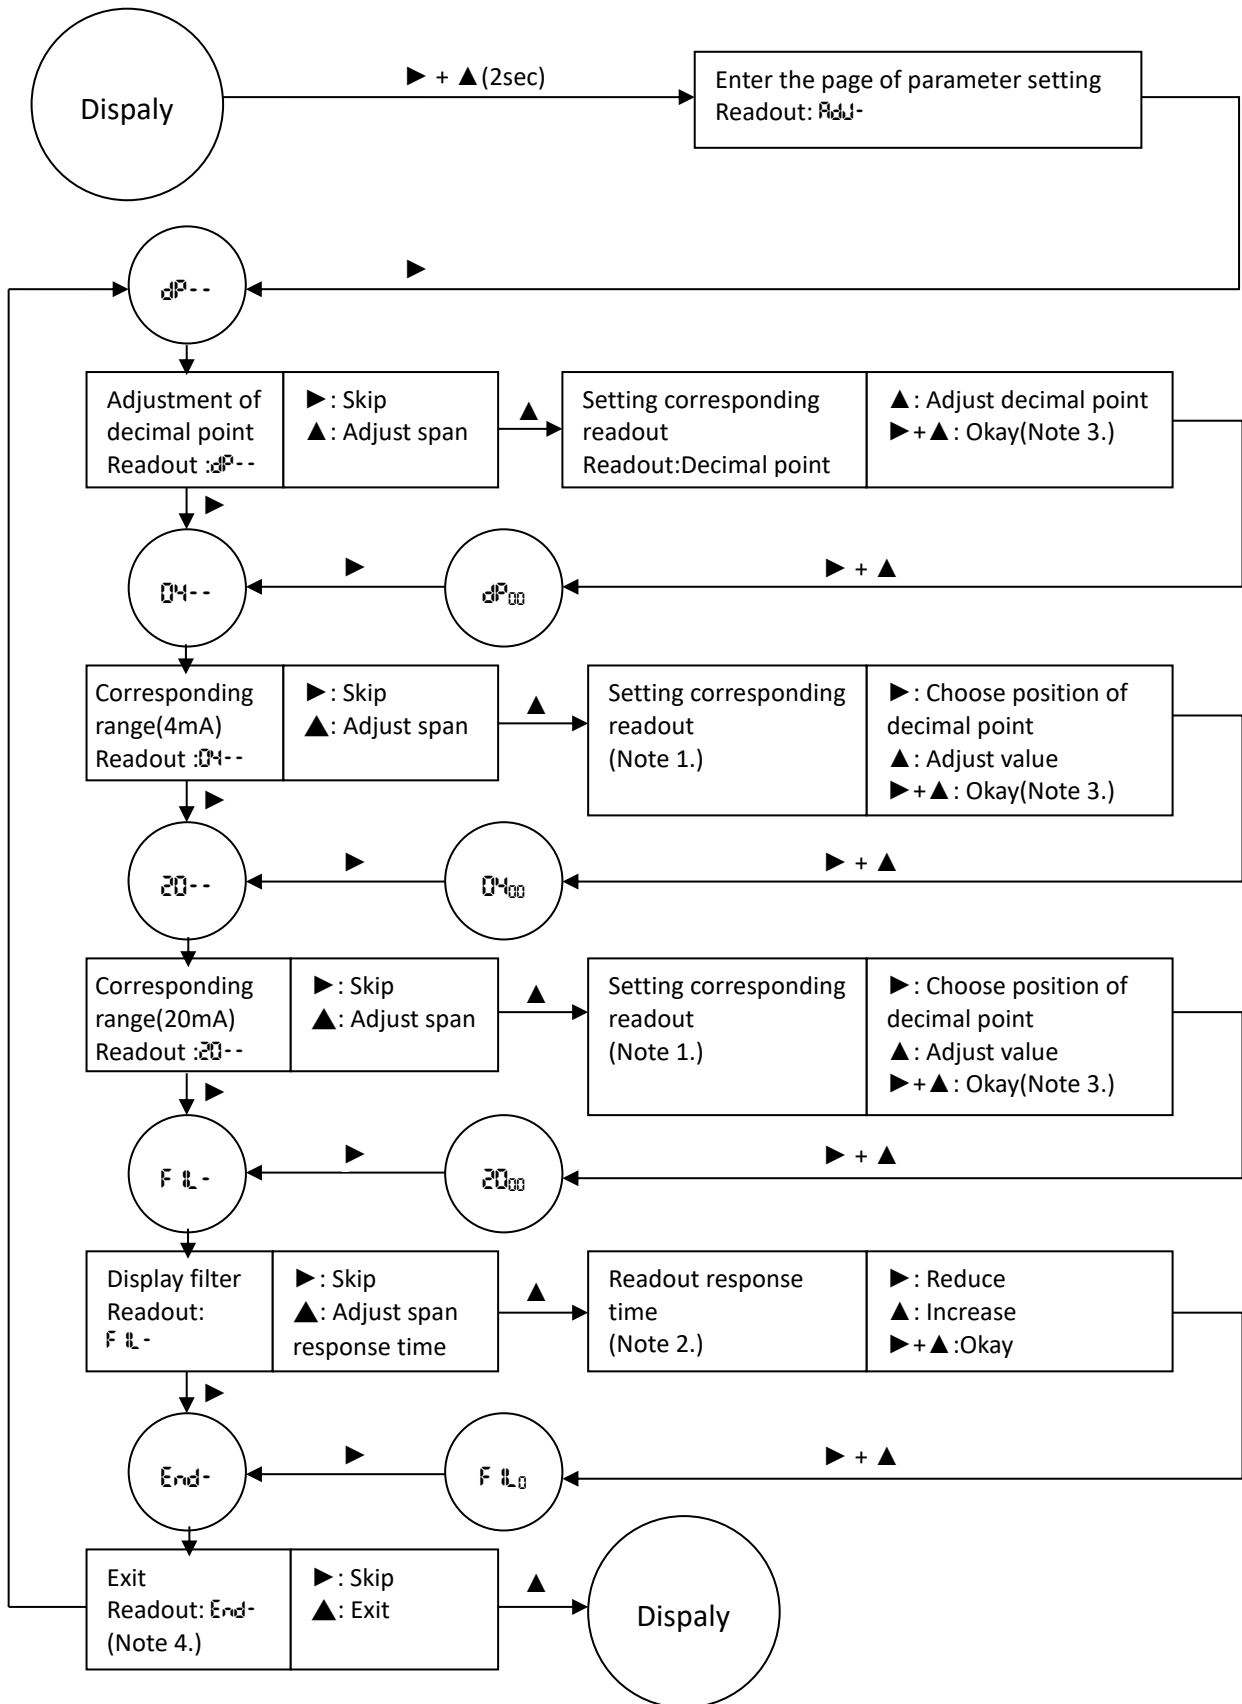

### Note 1.

- A) Readout decimal point that you set.
- B) Adjustment range: -1999 ... 9999.

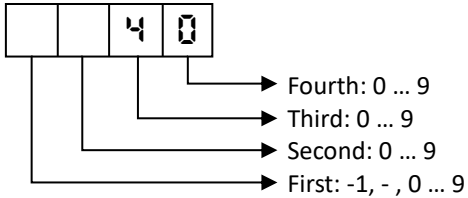

- C) Default:  
4mA corresponding 400  
20mA corresponding 2000

### Note 2.

- A) Adjustment of readout's response time. 0.5 s/ Unit.
- B) The range of response time: ( 0 s ... 20 s)
- C) Default: 0 s (s: second)

### Note 3.

To save, please press ►+▲ at the same time after you finished setting, and then it will skip to next parameter.


### Note 4.

If you didn't press any key over 20 s during setting, it will exit setting program and return to main manual without save.


## Diagram

### ■ 2-Wire(4 ... 20 mA)


DIN46350 Connection

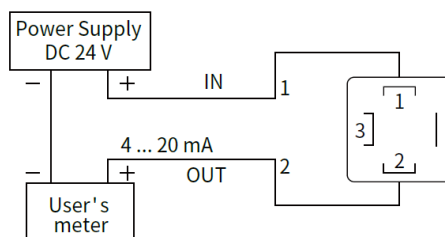

M12 Connection

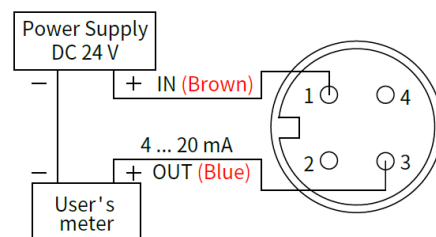


## 2. 3-Wire(0 ... 10 V)

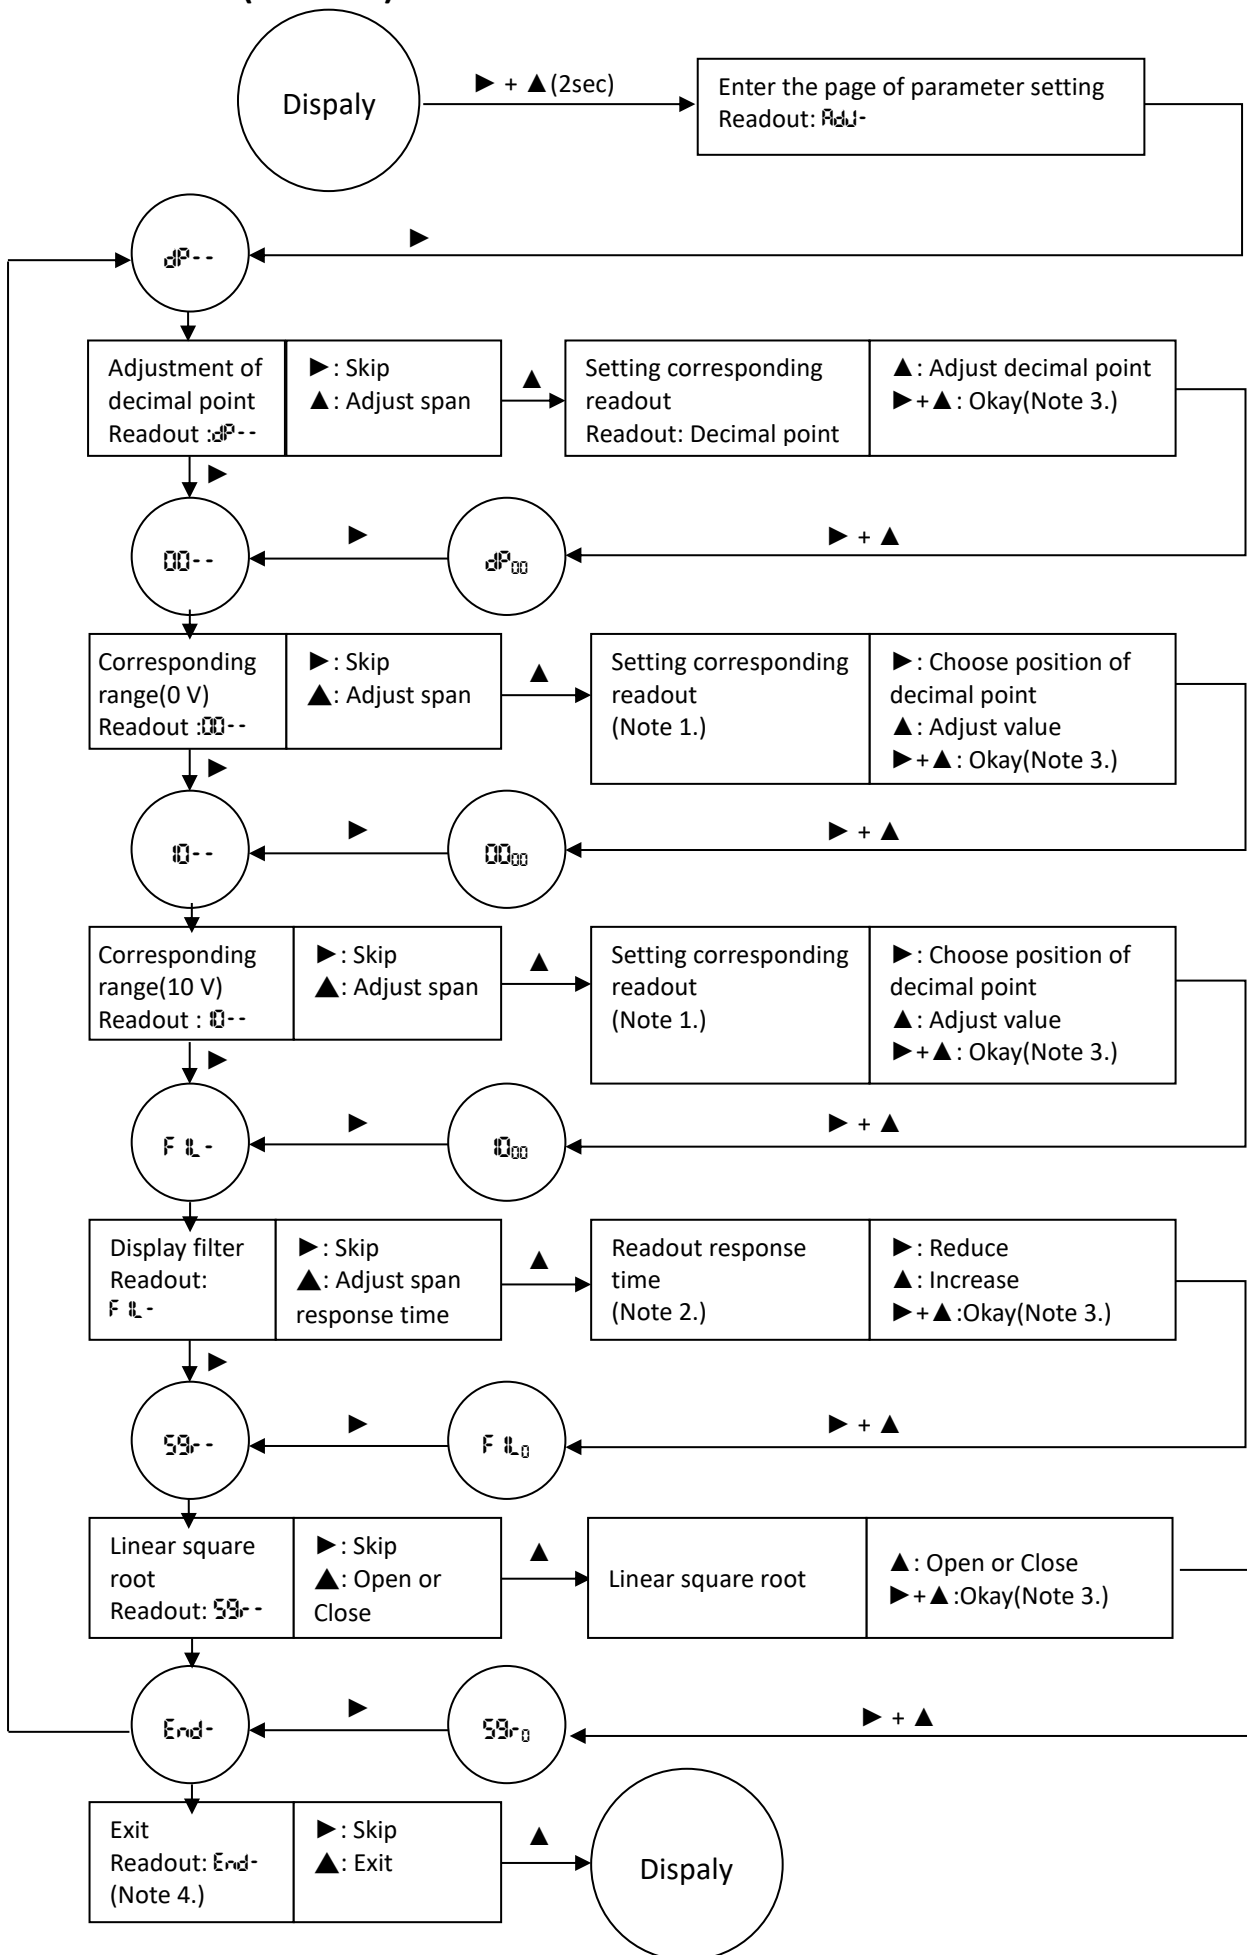

### Note 1.

- A) Readout decimal point that you set.  
 B) Adjustment range: -1999 ... 9999.

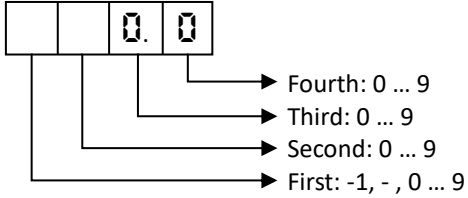

- C) Default:  
 0 V corresponding 0.0  
 10 V corresponding 100.0

### Note 2.

- A) Adjustment of readout's response time. 0.5 s/ Unit.  
 B) The range of response time: ( 0 s ... 20 s)  
 C) Default: 0 s (s: second)

### Note 3.

To save, please press ►+▲ at the same time after you finished setting, and then it will skip to next parameter.


### Note 4.

If you didn't press any key over 20 s during setting, it will exit setting program and return to main manual without save.

## Diagram


### ■ 3-Wire(0 ... 10 V)

DIN46350 Connection

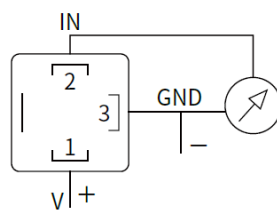

1.(V+) 2.(IN) 3.(GND)

M12 Connection

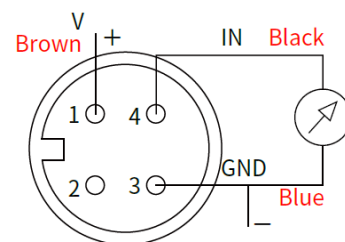

1.(V+) 3.(GND) 4.(IN)

# Accurate | Professional | Stable

Temperature and Humidity / Dew Point / Air Velocity / Flow / Pressure

Measuring Specialist



Tel.: 886-2-8221-2471  
Web : [www.eyc-tech.com](http://www.eyc-tech.com)  
e-mail : [info@eyc-tech.com](mailto:info@eyc-tech.com)